



# FDP 0001 A

F.01U.500.374



# BOSCH

**cs** Instalační manuál

**Krycí deska**

**da** Installationsmanual

**Kunstig dækplade**

**de** Installationsanleitung

**Blindabdeckung**

**el** Οδηγίες συναρμολόγησης

**Ομοίωμα καλύμματος**

**en** Installation Guide

**Dummy Cover Plate**

**es** Manual de Instalación

**Placa de cubierta falsa**

**fi** Asennusohjeet

**Peitelevy**

**fr** Manuel d'installation

**Plaque de recouvrement factice**

**hr** Priručnik za instaliranje

**Prazna prednja ploča**

**hu** Telepítési kézikönyv

**Fedő lemez**

**it** Manuale di installazione

**Finta piastra di copertura**

**nl** Installatiehandleiding

**Dummy-afdekplaat**

**no** Monteringsinstruksjoner

**Blinddeksel**

**pl** Instrukcja instalacji

**Ośłona modułu**

**pt** Manual de Instalação

**Placa de cobertura falsa**

**ro** Manual de Instalara

**Placă de acoperire fictivă**

**ru** Инструкция по установке

**Глухая внешняя накладка**

**sl** Priročnik za montažo

**Nepravi pokrov**


**sv** Installation manual

**Dummy-täckplatta**


**tr** Kurulum kılavuzu

**Paravan kapak plakası**


CPH 0006 A

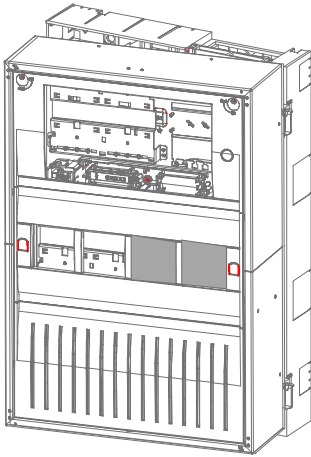


MPH 0010 A

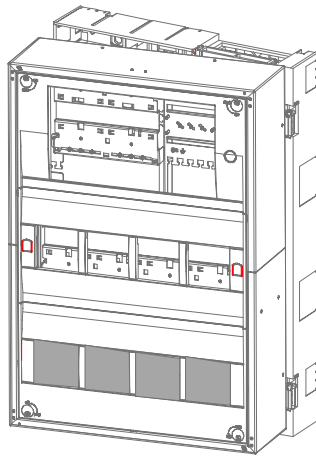


EPH 0012 A

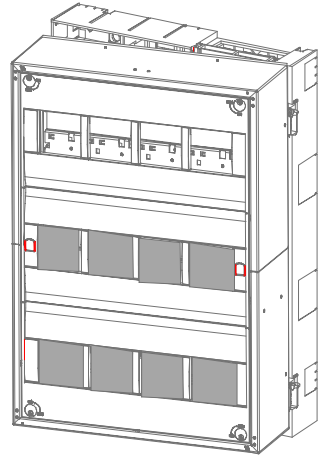


HCP 0006 A







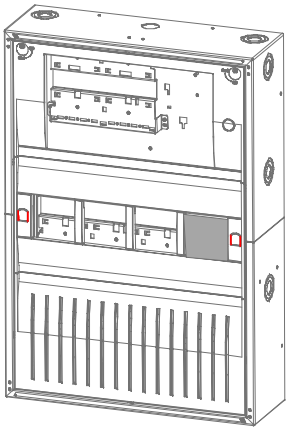


HBC 0010 A

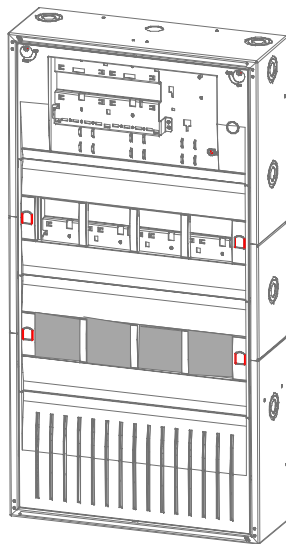

HBE 0012 A

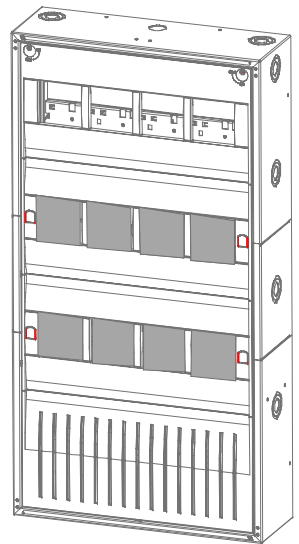

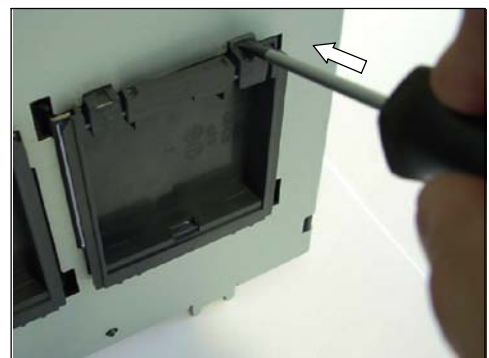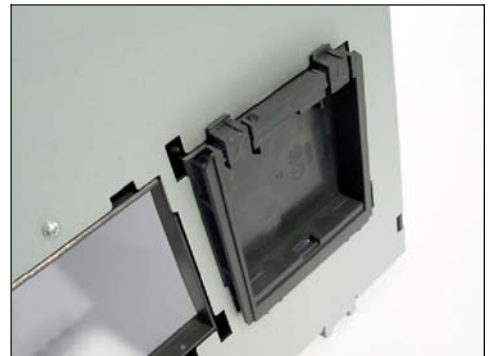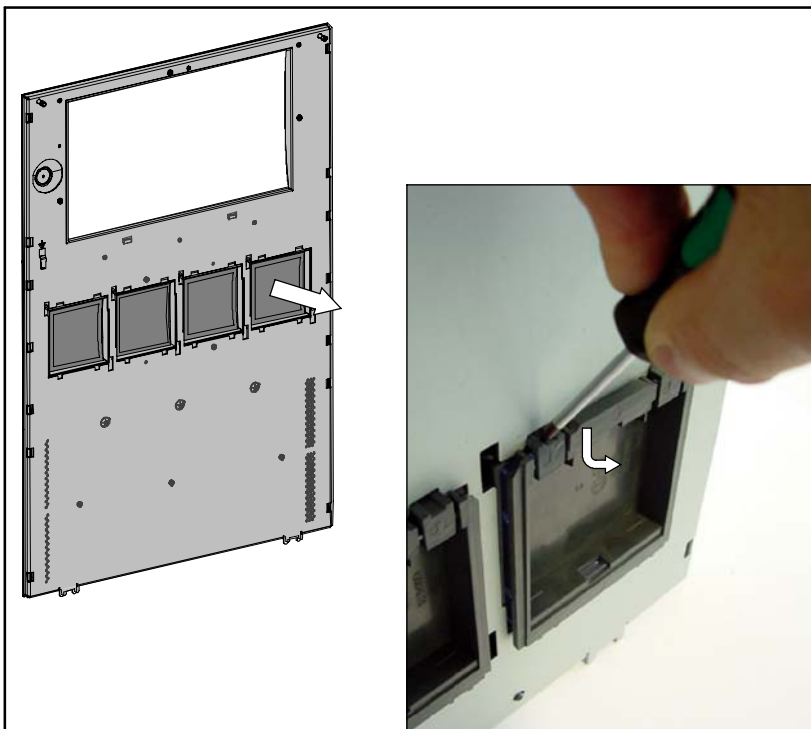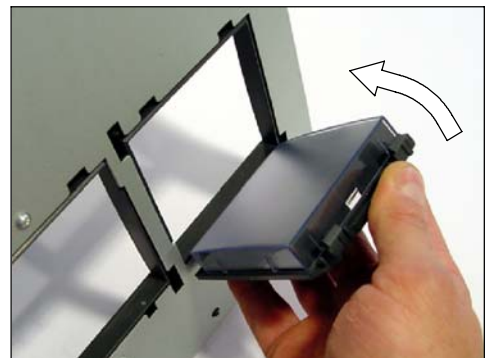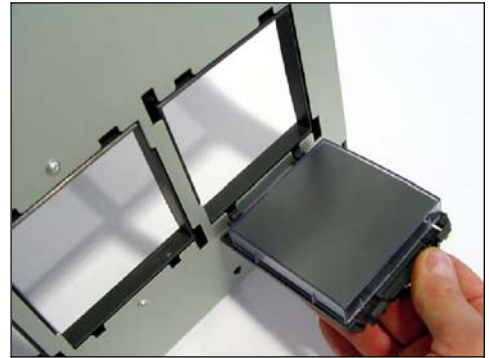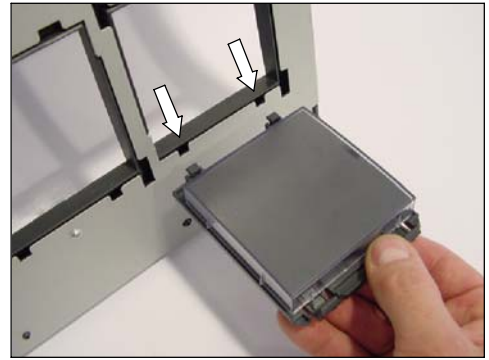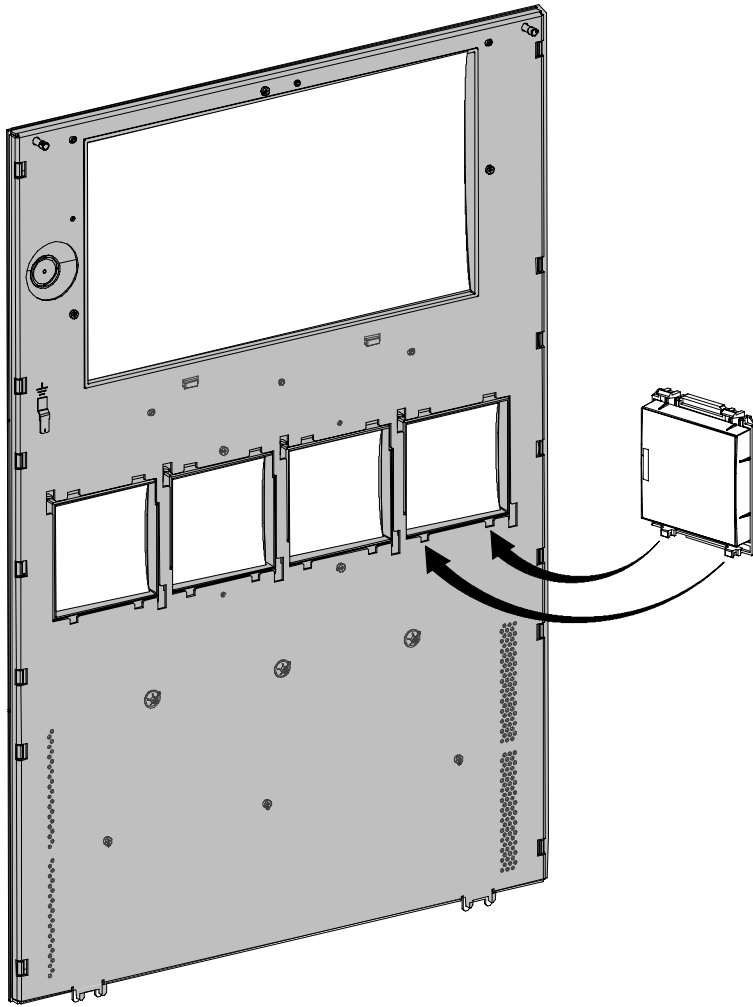

**Bosch Sicherheitssysteme GmbH**

Robert-Koch-Strasse 100

DS-85521 Ottobrunn

Germany

Telefon +49 (0)89 6290-0

Telefax +49 (0)89 6290-1020

**[www.boschsecurity.com](http://www.boschsecurity.com)**

©Bosch Sicherheitssysteme GmbH, 2009